



Outpost : garden pod

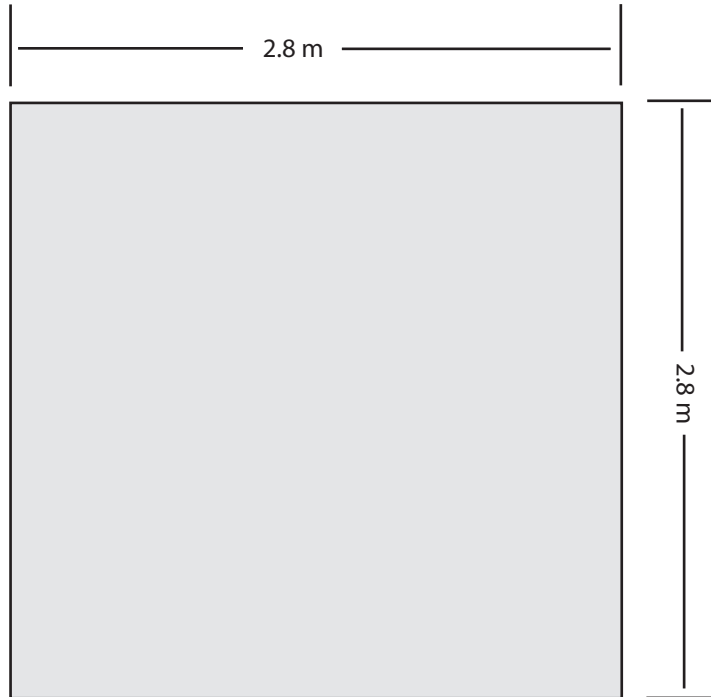

▲ FRONT

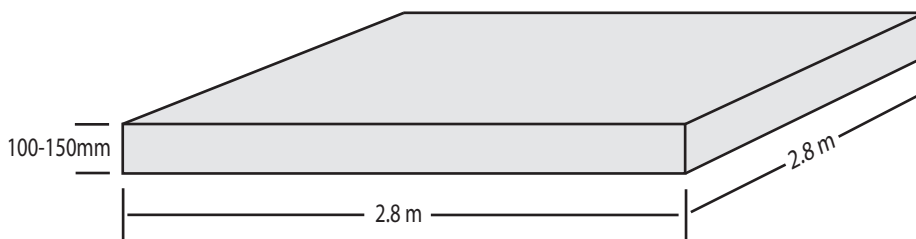

▲ FRONT

GARDEN POD BASE

Your Pod base needs to be constructed from either paving slabs laid onto a base of hard-core and sharp sand 100-150mm deep
OR
alternatively an area of concrete 100-150mm deep.

It is important that the Pod base is level.